Vacuum Cleaner
user manual

✻ Before operating this unit, please read the instructions carefully.
✻ For indoor use only.

English

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/global/register

SAMSUNG

SAFETY INFORMATION

WARNING • Before operating the appliance, please read this manual thoroughly and retain it for your reference.

WARNING • Because these following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.

CAUTION/WARNING SYMBOLS USED

WARNING	Indicates that a danger of death or serious injury exists.
CAUTION	Indicates that a risk of personal injury or material damage exists.

OTHER SYMBOLS USED

	Represents something you must NOT do.
	Represents something you must NOT disassemble.
	Represents something you must NOT touch.
	Represents something you must follow.
	Indicates that you must disconnect the power plug from the socket.
	Represents a ground is needed to prevent electric shock.
	It is recommended that this symbol be handled by service man.

safety information

IMPORTANT SAFEGUARDS

- Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
- WARNING: Do not use the vacuum cleaner when rug or floor is wet.
  Do not use to suck up water.
- Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in these instructions.
- Do not use the vacuum cleaner without a dust bag.
  Change the dust bag before it is full in order to maintain the best efficiency.
- Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
- Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put weight on the hose. Do not block the suction or the exhaust port.
- Switch the vacuum cleaner off on the body of the machine before unplugging from the electrical outlet. Disconnect the plug from the electrical outlet before changing the dust bag or dust container. To avoid damage, please remove the plug by grasping the plug itself, not by pulling on the cord.
- This appliance is not intended for use by young children or infirm persons without supervision unless they are adequately supervised by a responsible person to ensure that they can use the appliance safely.
  Young children should be supervised to ensure that they do not play with the appliance.
- The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
- The use of an extension cord is not recommended.
- If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Don’t carry the vacuum cleaner by holding the hose.
  Use the handle on the vacuum cleaner set.
- Unplug the cleaner when not in use. Turn off the power switch before unplugging.

contents

ASSEMBLING THE CLEANER 05

05 Assembling the Cleaner

OPERATING THE CLEANER 06

06 Power cord
06 On/Off Switch
06 Power control

MAINTAIN TOOLS AND FILTER 08

08 Using accessory
09 Maintain floor tools
11 Dust full indicator
12 Changing the dust bag
12 Cleaning inlet filter
13 Cleaning outlet filter
13 Change the battery (optional)

TROUBLESHOOTING 14

assembling the cleaner

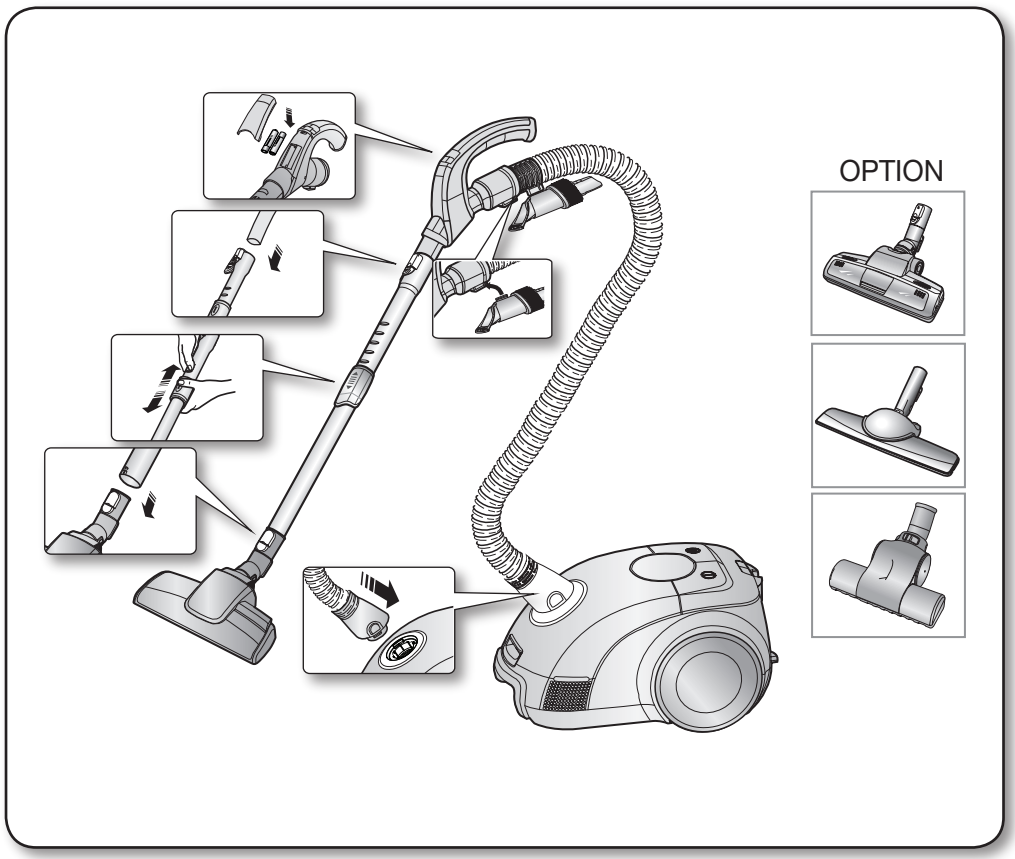

- Features may vary according to model. Refer to 5,6 page.

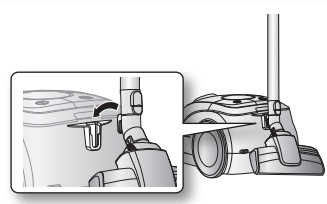

CAUTION

- For storage, park the floor nozzle.

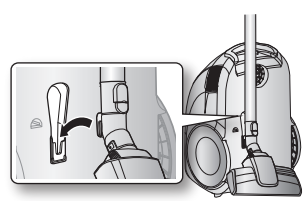

operating the cleaner

POWER CORD

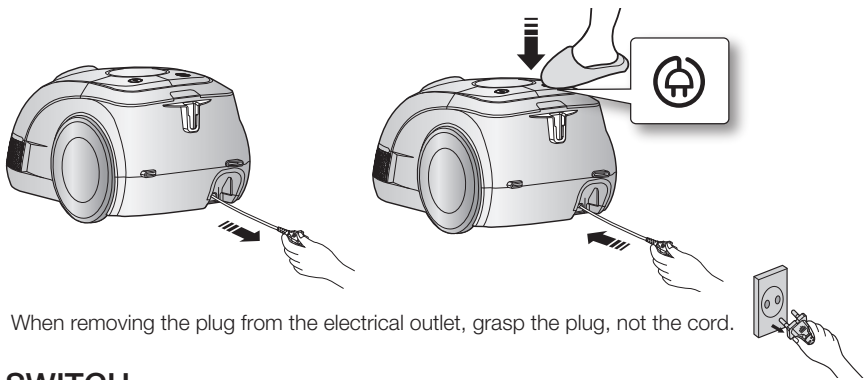

- When removing the plug from the electrical outlet, grasp the plug, not the cord.

ON/OFF SWITCH

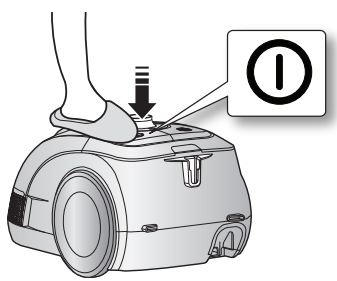

POWER CONTROL

Remote-control type

- HOSE

1. Vacuum cleaner ON/OFF(⏻)
Press the ON/OFF button to operate the vacuum cleaner. Press again to stop the vacuum cleaner.

2. Vacuum cleaner (+, -)
Press the (+) button to operate the vacuum to highsuction power. Press the (-) button to operate the vacuum to low suction power.
(ON) MIN → MID → MAX

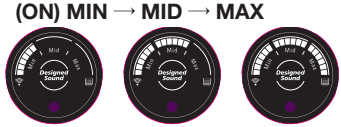

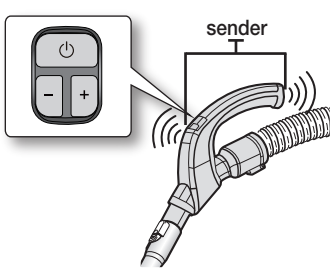

Handle Control
The cleaner is controlled by using infrared signals.

- Don't cover the handle sender when you use a handel control button.
- If the remote handle control is not working, the cleaner can be operated using the ON/OFF button on the body of the machine.

- BODY

Press the power ON/OFF button repeatedly to start and to stop the vacuum cleaner.
(OFF → ON → OFF)

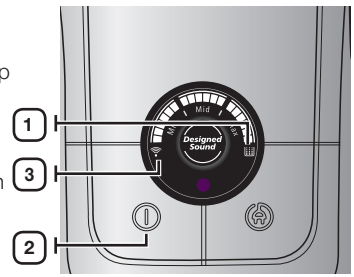

If the remote handle control is not working, the cleaner can be operated using the ON/OFF button on the body of the machine.

OPTIONAL-Digital Signal

1	The filter light is illuminated when the dusk pack requires checking or emptying. An audio signal will also sound.
2	The ON/OFF button operates the vacuum cleanner or stops it.
3	The INFRARED light indicates the part that receives the infra-red signal from the handle control.

maintain tools and filter

USING ACCESSORY

Accessory

- Push the accessory on to the end of the hose handle

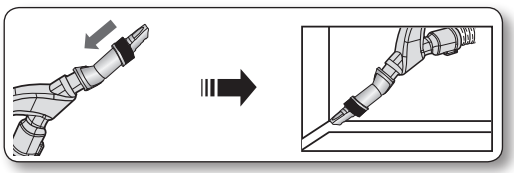

- Pull out and turn the dusting brush for cleaning delicate areas.

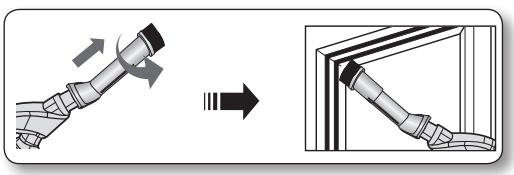

- To use the upholstery tool, push the accessory on to the end of the hose handle in the opposite direction.

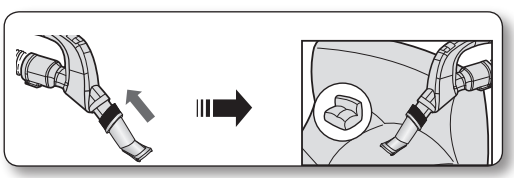

Pipe

- Adjust the length of the telescopic pipe by sliding the length control button located in the center of the telescopic pipe back and forth.

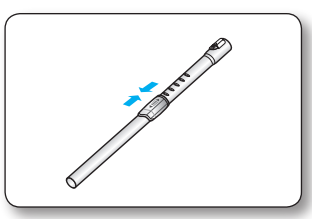

- To check for blockages, separate the telescopic pipe and adjust to shorten. This allows for easier removal of waste clogging the tube.

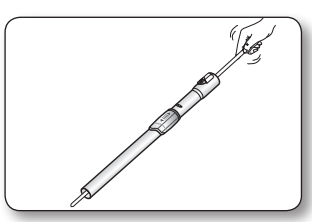

MAINTAIN FLOOR TOOLS

3Way Brush

- Adjust the inlet lever according to the floor surface.

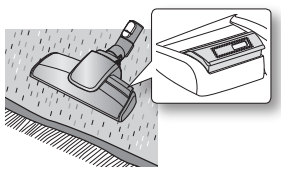

Carpet Cleaning

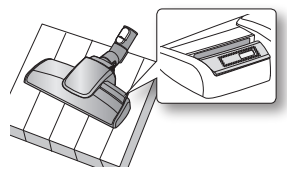

Floor Cleaning

- Remove waste matter completely if the inlet is blocked.

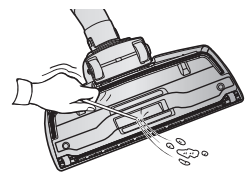

Power Turbo Plus(Option)

For improved pick-up of pet hair and fibre on carpets.

Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.

1. Push the Open button on the transparent screen cover to separate the cover.

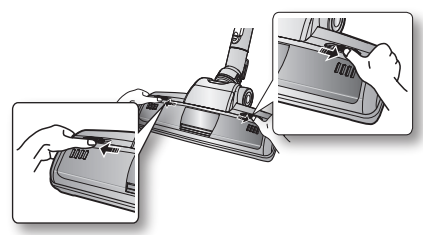

2. Remove the brushbar from the transparent screen.

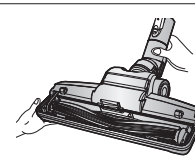

3. Remove waste matter such as dust and hair tangled around the brushbar using scissors.

4. Remove dust inside the brush housing using a dry duster or crevice tool.

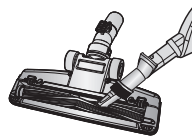

5. Insert brushbar into rotating belt and assemble.

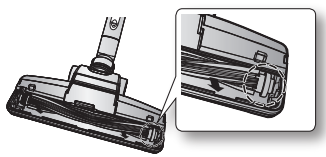

6. Click the transparent screen cover back into place to reassemble.

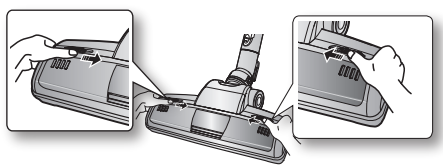

Parquet brush (Option)

Vacuum dust in wide area at once

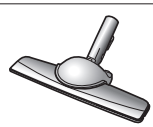

• Remove waste matter completely if the inlet is blocked.

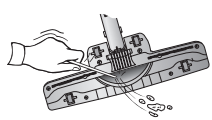

Brush for blanket (Option)

For picking up pet hair and fibre on upholstery and bed linen.
Clogs on turbine keeps brush from turning, and in this case, take care of it.

1. Remove waste matter completely when inlet is blocked.

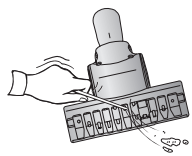

2. Turn the lock button to 'UNLOCK', and remove waste matter.

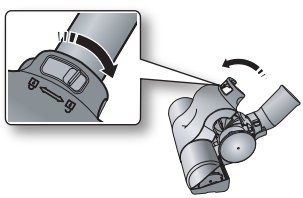

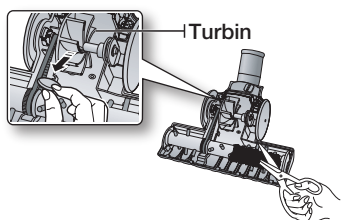

3. To reassemble, align the cover to the front of the main body and close. After closing the cover, ensure that the lock button is turned to the 'LOCK' position.

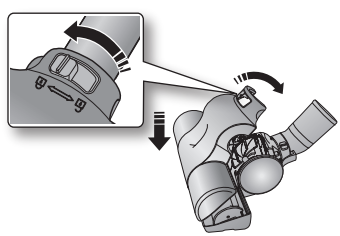

DUST FULL INDICATOR

Remote-Control Type

When the "DUST FULL LAMP" light comes on, please change the DUST BAG as shown in the following illustrations.

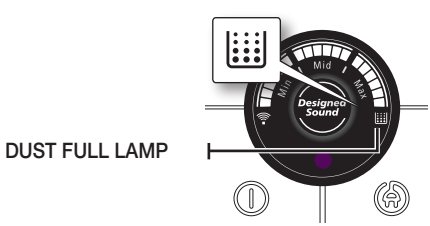

maintain tools and filter

CHANGING THE DUST BAG

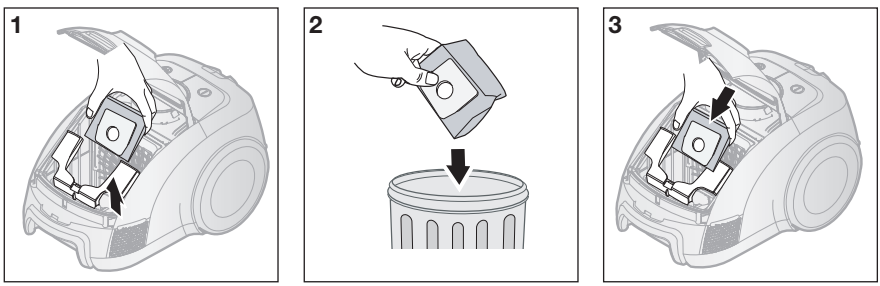

A used dust bag can be sealed by removing the paper from the adhesive strip and sealing the strip over the hole.

OPTIONAL

- For Cloth Bag
  After using, if the cloth bag is full of dust, clean the cloth bag and use it again.

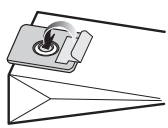

You can purchase dust bags in the shops where you bought this vacuum cleaner.
Micro bag or paper bag both can be used as you prefer(Micro-bag:VP-78M, Paper-bag:VP-90)

CLEANING INLET FILTER

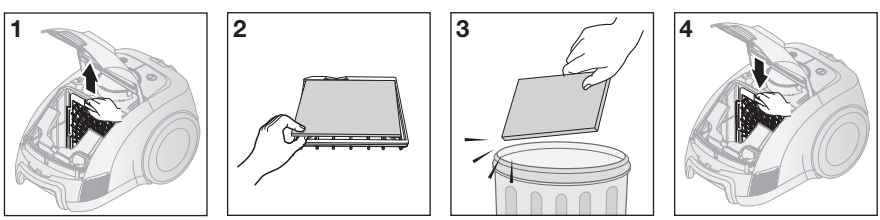

Don't throw away the filter.

CLEANING OUTLET FILTER

SILVER NANO HEPA H13 (Option)

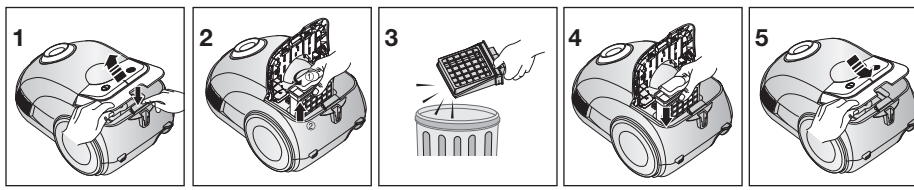

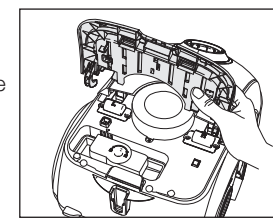

CAUTION

- When the Assy Panel Control is pulled up very strongly, it is possible the Assy Panel Control is separated for the safety of the product. In this case, just reassemble the Assy Panel Control.
  This is not a malfunction.

CHANGE THE BATTERY (OPTIONAL)

1. When the vacuum cleaner dows not work, replace the batteries. If the problem persists, please contact our authorized dealer.

2. Use 2 batteries of size AAA.

WARNING

1. Never disassemble or recharge the batteries.

2. Never heat up the batteries or throw them into fire.

3. Do not reverse (+), (-) poles

4. Dispose of the batteries property.

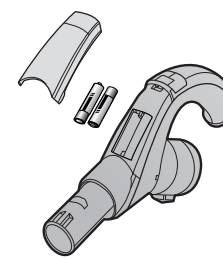

BATTERY TYPE : AAA Size

troubleshooting

PROBLEM	SOLUTION
Motor dows not start.	• Check cable, pulg and socket. • Leave to cool.
Suction force is gradually decreasing.	• Check for blockage and remove.
Cord does not rewind fully.	• Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner dows not pick up dirt.	• Check hose and replace if required.
Low or decreasing suction	• Please check filter and, if required, clean as illustrated in the instructions.

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

COUNTRY	CUSTOMER CARE CENTER	WEB SITE
AUSTRALIA	1300 362 603	www.samsung.com/au
HONG KONG	3698-4698	www.samsung.com/hk
MALAYSIA	1800-88-9999	www.samsung.com/my
SINGAPORE	1800-SAMSUNG(7267864)	www.samsung.com/sg

MEMO

Code No. DJ68-00428F (REV 0.0)